



Installation instructions for **Mano-Clock R** Level gauge

The gauge has been set up, and the length of the guiding pipe has been adjusted, in accordance with the X and Y values (please see figure 1) which were provided when the product was ordered. These X and Y values are stated on the delivery note.

Installing the gauge

Apply thread tape. Screw in the gauge by hand.

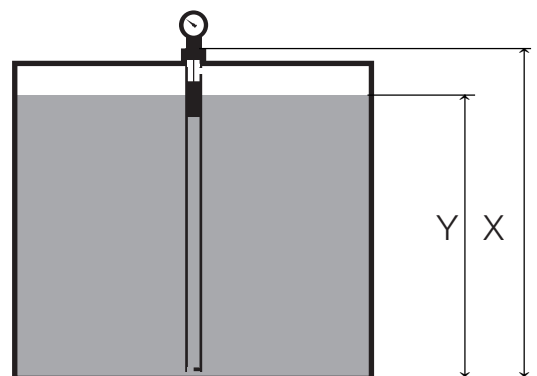


Figure 1

Y= Max. liquid level in cm.

X= Tank bottom to sockettop edge in cm.

NOTE: Not for use with tanks containing gasoline, ethanol, etc. or pressurised tanks. Not intended for use as an overfill prevention device. All specifications are subject to change without prior notice. Directives and Regulations may vary from country to country.